



Changing your Everpure Water Filter

There are 2 types of Everpure Filters, a large 4H type and a smaller OCS type. Please ensure you order the same type as your existing cartridge. If you are unsure which type you have, or have any other questions regarding this procedure please call Chiasso Coffee on 09 445 1816.

Water Filters should be changed every year to prevent lime scale build up in your Espresso Machine. Lime scale can cause significant & costly damage to your machine.

Complete the following steps to change your filter:

1. Turn off the Espresso Machine. Note that this is usually a two stage switch.
2. Follow the stainless steel water pipe back from the machine until you find the water tap.
3. Turn the tap off.
4. Locate the Everpure water filter; it should be between the tap and the machine.
5. Remove anything from around the filter that you don't want to get wet.
6. Remove the old cartridge by twisting left and pulling down. Even with the water switched off there will always be a little bit of water left in the pipes, so you may like to use a bucket to collect this.
7. Install the new cartridge by the reverse of part 6.
8. Turn the tap back on & check for any leaks.
9. Turn the Espresso Machine switch to position 1 which will activate the pump to fill the boiler (if the boiler is already full then the pump won't activate).
10. Once the pump stops turn the Espresso Machine switch to position 2. This will turn the element back on to begin reheating the boiler.
11. Write the installation date on the water filter with a permanent marker.